


# ROTARY HAMMER

## BH-1200

No.:020868 230 V  
No.:035206 127 V

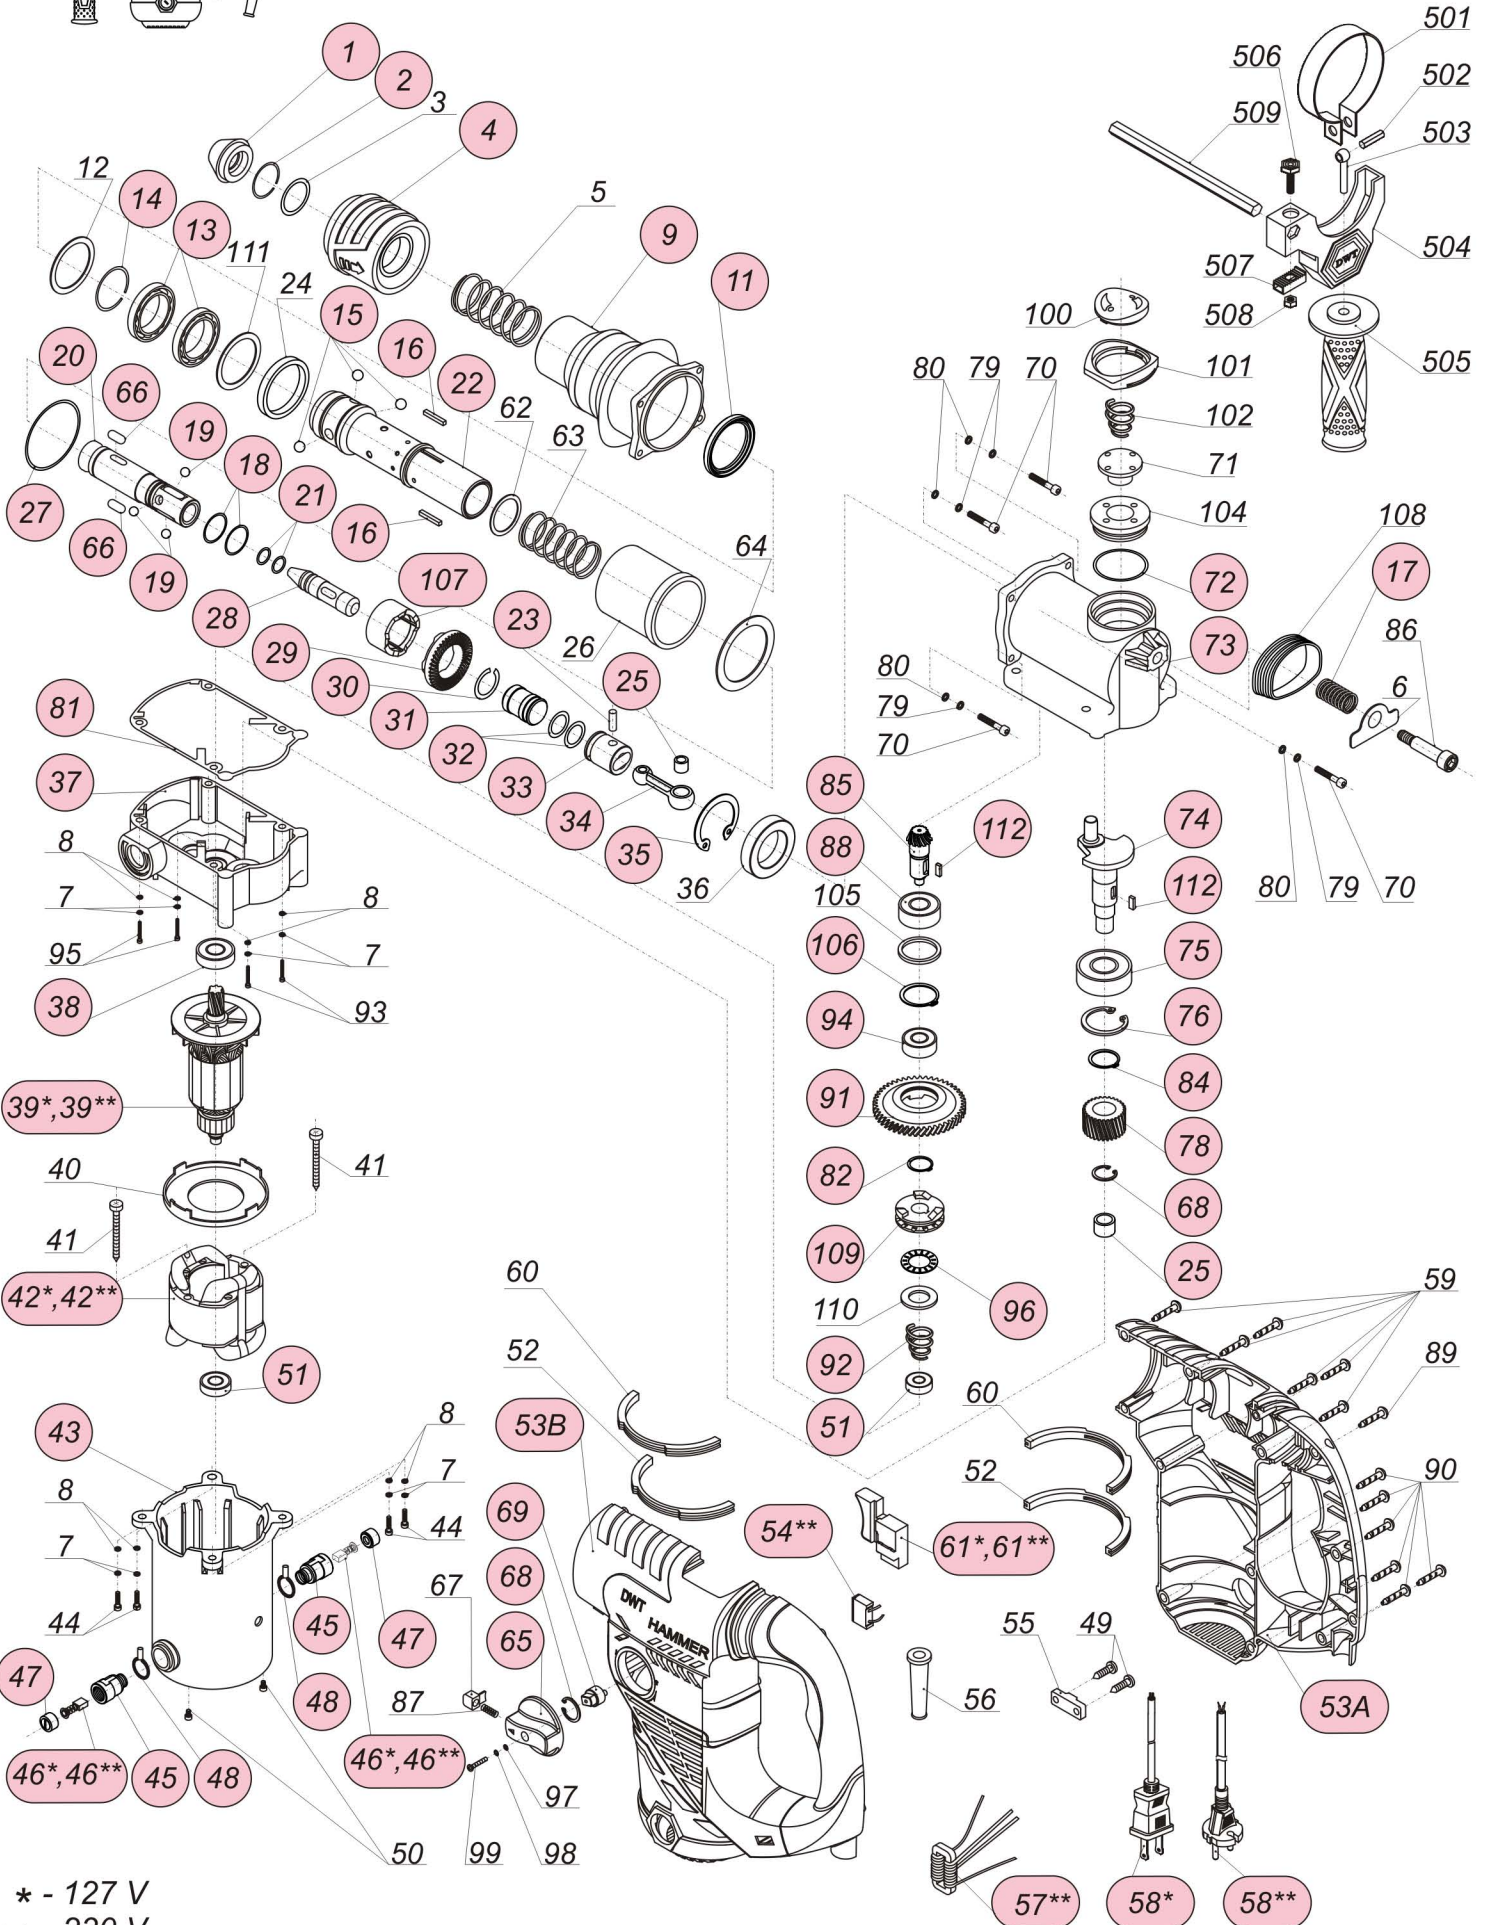

\* - 127 V  
\*\* - 230 V

**DWT**April 2006  
DIYROTARY HAMMER  
BH - 1200Model No.: 020868 - 230 V  
035206 - 127 V**PRICE LIST OF SPARE PARTS**

<b>Pos.</b>	<b>Part Number</b>	<b>Description (Q-ty)</b>	<b>Description National Language (Q-ty)</b>	<b>Price, USD</b>
1	A5-0087/01	Front cap		
2	A5-0087/28	Circlip Ø28		
3	A1-2083/44	Washer Ø28		
4	A5-0087/02	Protection sleeve		
5	A5-0087/50	Spring Ø40x50		
6	A5-0086/50	Damping washer		
7	A1-2083/33	Spring washer Ø5 (8)		
8	A1-2083/04	Washer Ø5 (8)		
9	A5-0070/01	Cylinder housing		
11	A5-0087/03	Oil seal Ø40xØ49x6		
12	A1-2083/16	Washer Ø55xØ45x1.5		
13	A5-0087/04	Ball bearing 61808 (2)		
14	A5-0087/05	Snap ring Ø40		
15	A5-0087/06	Steel ball Ø9 (3)		
16	A5-0081/07	Flat key 3x18 (2)		
17	A5-0083/01	Damping spring Ø18x40		
18	A5-0087/30	"O" ring Ø28x2 (2)		
19	A5-0081/09	Steel ball Ø7.14 (3)		
20	A5-0087/07	Guard ring sleeve		
21	A5-0087/31	"O" ring Ø19x2 (2)		
22	A5-0087/08	Cylinder		
23	A5-0087/09	Piston pin		
24	A5-0087/51	Ring Ø50xØ40x10		
25	A1-0084/02	Needle bearing HK1012 (2)		
26	A5-0087/52	Plastic bush Ø55xØ48x64		
27	A5-0087/32	"O" ring Ø68x1,5		
28	A5-0087/10	Second striker		
29	A5-0050/01	Cone gear		
30	A5-0087/29	Snap ring Ø32		
31	A5-0087/11	Striker		
32	A5-0087/33	"O" ring Ø28x3 (2)		
33	A5-0087/12	Piston		
34	A5-0087/13	Connecting rod		
35	A5-0087/14	Circlip Ø50		
36	A5-0087/53	Oil bearing		
37	A5-0070/02	Gear housing		
38	A1-0909/01	Ball bearing 6001.2Z		
39*	C5-0006/01	Armature 127V		
39**	B5-0006/01	Armature 230V		
40	A5-0087/54	Guide wind circle		
41	A1-2085/47	Screw ST5x55 (2)		
42*	C5-0021/01	Stator 127V		
42**	B5-0021/01	Stator 230V		
43	A5-0067/01	Motor housing		
44	A1-2081/30	Screw M5x20 (4)		
45	A5-0087/15	Brush holder (2)		
46*	C5-0953/01	Carbon brush (2) 127V		
46**	B5-0953/01	Carbon brush (2) 230V		
47	A5-0087/16	Brush cap (2)		
48	A5-0087/17	Connection spring Ø16(2)		
49	A1-2085/22	Screw ST4x16 (4)		
50	A1-2081/25	Screw M5x10 (2)		
51	A1-0902/01	Ball bearing 608.2Z (2)		
52	A5-0087/55	" U " Rubber gascet (2)		

<b>Pos.</b>	<b>Part Number</b>	<b>Description (Q-ty)</b>	<b>Description National Language (Q-ty)</b>	<b>Price, USD</b>
53A	A5-0067/02	Housing A		
53B	A5-0067/03	Housing B		
54**	B1-0941/01	Condenser 0.22µF 230V		
55	A1-0081/54	Cord clip		
56	A1-0187/62	Rubber sleeve		
57**	B1-0941/07	Inductor 24x12x4 230V		
58*	C1-0933/01	Cord 127V		
58**	B1-0933/01	Cord 230V		
59	A1-2085/24	Screw ST4x20 (6)		
60	A5-0087/56	" U " Rubber gascet 2 (2)		
61*	C5-0033/01	Switch 127V		
61**	B5-0033/01	Switch 230V		
62	A5-0087/57	Spring holder		
63	A1-2084/67	Spring Ø44x56		
64	A1-2083/45	Washer Ø62xØ48x3		
65	A5-0084/07	Switch knob		
66	A5-0087/18	Balling pole Ø8x19 (2)		
67	A5-0084/51	Locating block		
68	A5-0084/08	Circlip for hole Ø15 (2)		
69	A5-0084/09	Knob grip		
70	A1-2081/78	Hex.screw M5x25 (4)		
71	A5-0087/58	Oil seal cap		
72	A5-0087/34	"O" ring Ø45x1,5		
73	A5-0070/03	Crank housing		
74	A5-0087/19	Crank shaft		
75	A1-0911/01	Ball bearing 6003.2Z		
76	A5-0084/14	Circlip for hole Ø35		
78	A5-0050/02	First gear		
79	A1-2083/32	Spring washer Ø4(4)		
80	A1-2083/01	Washer Ø4 (4)		
81	A5-0087/20	Gasket		
82	A1-0083/08	Circlip for shaft Ø15		
84	A5-0087/21	Circlip Ø17		
85	A5-0050/03	Third shaft gear		
86	A5-0086/56	Damping bolt		
87	A5-0084/52	Knob spring Ø5x25		
88	A1-0919/01	Ball bearing 16003.2Z		
89	A1-2085/25	Screw ST4x22		
90	A1-2085/23	Screw ST4x18 (6)		
91	A5-0050/04	Second gear		
92	A5-0087/22	Cone spring A		
93	A1-2081/34	Screw M5x45 (2)		
94	A1-0920/01	Ball bearing 61902.2Z		
95	A1-2081/33	Screw M5x35 (2)		
96	A5-0087/23	Thrust needle bearing 2542		
97	A1-2083/43	Washer Ø3		
98	A1-2083/31	Spring washer Ø3		
99	A1-2081/06	Screw M3x20		
100	A5-0087/59	Oil seal cover		
101	A5-0087/60	Oil seal holder		
102	A5-0084/55	Cone spring B		
104	A5-0087/61	Plastik holder		
105	A5-0087/62	Location cover		
106	A5-0087/24	Circlip for shaft Ø28		
107	A5-0087/25	Clutch bush		
108	A5-0086/58	Damping bush		
109	A5-0087/26	Clutch		
110	A5-0087/63	Washer Ø42xØ25x1		
111	A5-0087/64	Washer Ø51xØ48x1.5		

<b>Pos.</b>	<b>Part Number</b>	<b>Description (Q-ty)</b>	<b>Description National Language (Q-ty)</b>	<b>Price, USD</b>
112	A5-0087/27	Flat key 4x14 (2)		
501	A5-0087/65	Chuck ring		
502	A5-0084/59	Elastic cylinder pin 6x20		
503	A1-2082/07	Slipknot bolt M8x45		
504	A5-0087/66	Handle clip		
505	A5-0084/58	Side handle		
506	A1-0081/84	Hex.head screw M6		
507	A1-0081/85	Arresting lever fixed block		
508	A1-2082/23	Nut M6		
509	A1-0081/86	Depth rod		